


Different carrier is using different steel spacer:

The width of traditional carrier is 1.1mm, so it must use 1.1mm bottom length of steel spacer.

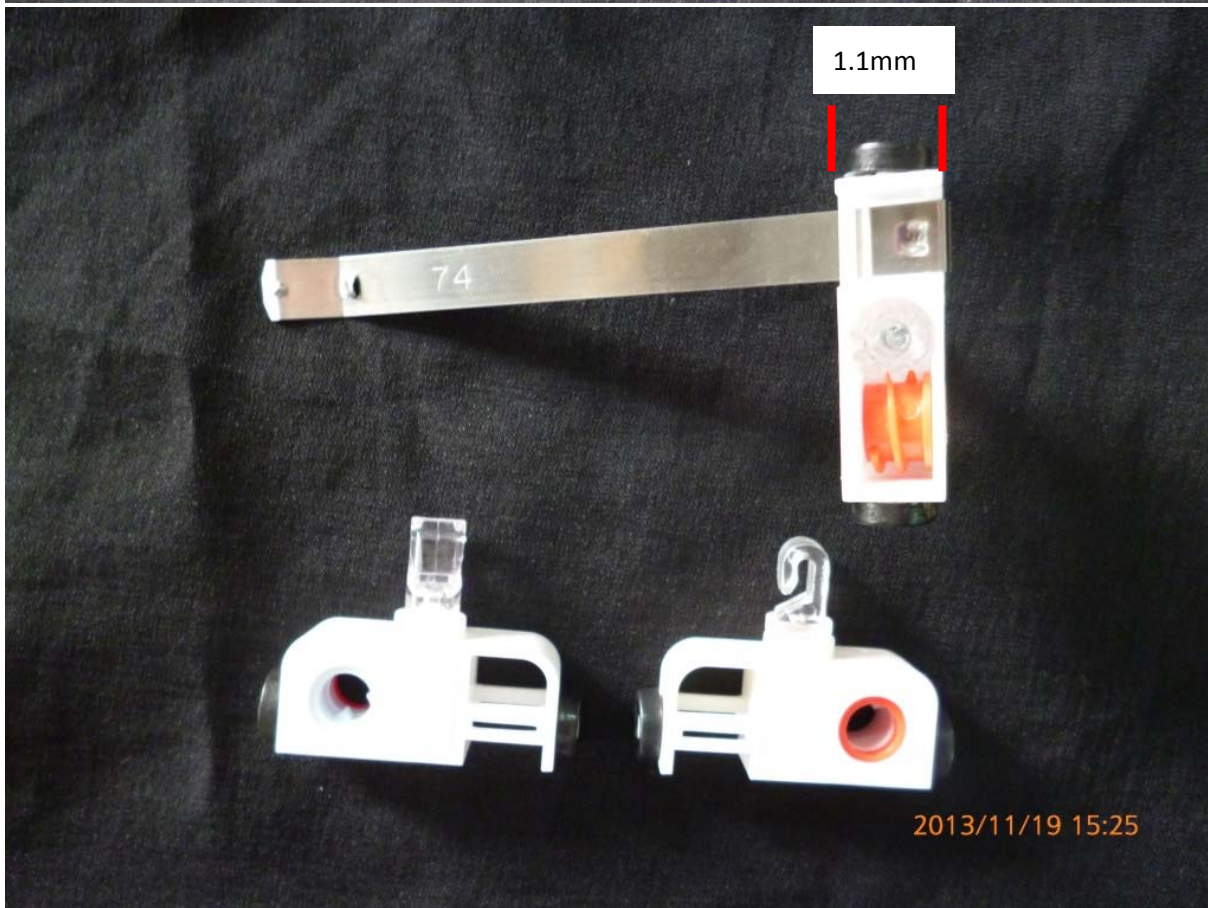




The carrier with removable hook is 0.8mm, so it must use 0.8mm bottom length of steel spacer.





The following is the reason we made 2 different metal spacer because their width of both carriers are different:

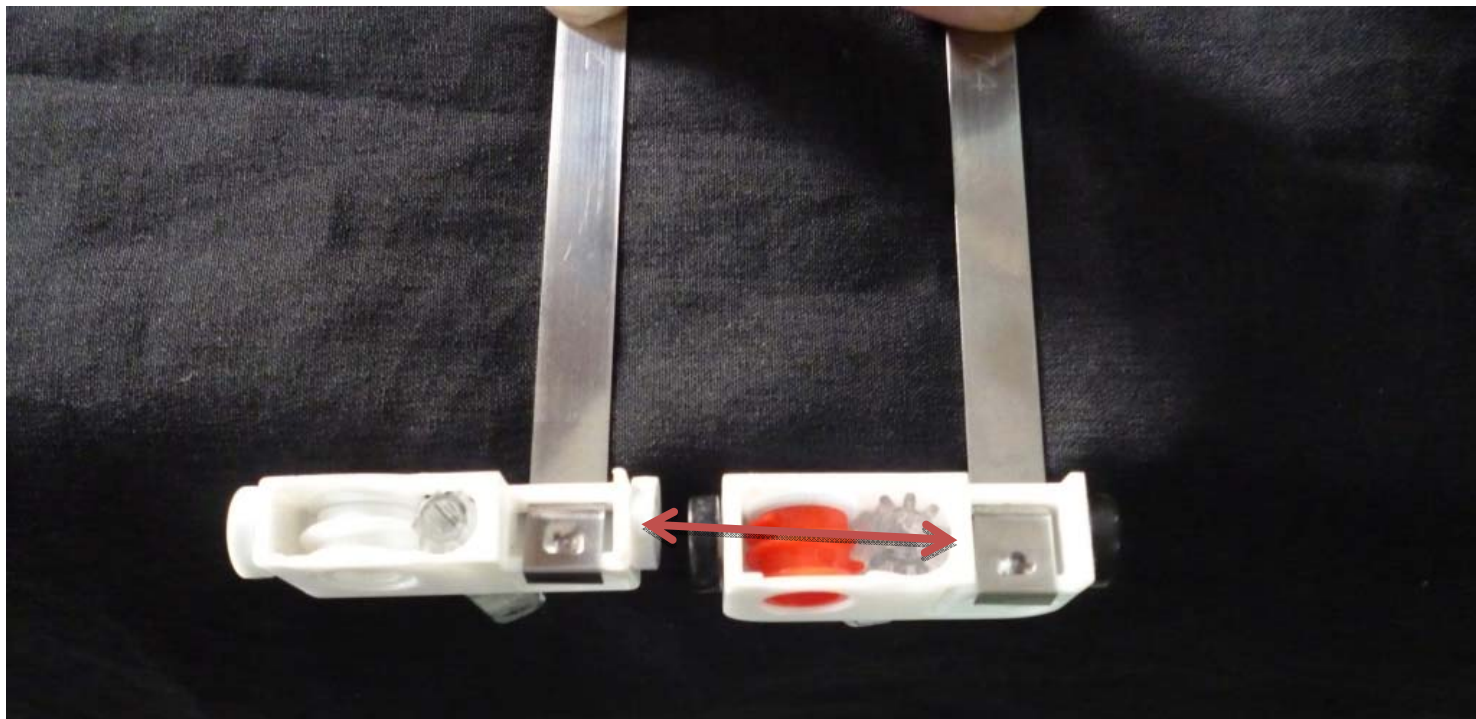

Best Regards and Keep in touch ^^

Ming-Chih Weng

 SHANG HUI BLIND COMPONENTS CO.,LTD

Address : No.212, Lane23, Shui-Kuan Rd, Jen-Mei Village, Niao-Sung Hsiang,  
Kaohsiung Hsien, 83346, **Taiwan**. R.O.C.

TEL : 886-7-732-2450

FAX : 886-7-732-3130

Website: [www.shanghui-blind.com](http://www.shanghui-blind.com)

MSN: [shang.hui@hotmail.com](mailto:shang.hui@hotmail.com)

Skype: shang.hui

E-mail : [shang.hui@msa.hinet.net](mailto:shang.hui@msa.hinet.net)

